

CLEANING OF CAST BRASS:

Cloth only,
NO ABRASIVES and NO CHEMICALS

ENTRETIEN:

Chiffon seulement,
AUCUN ABRASIF, AUCUN PRODUIT CHIMIQUE

CLEANING OF CRYSTAL:

1. Remove all crystal from chandelier.
2. Wash in a mild soap solution. (do not put in dishwasher)
3. Rinse and dry thoroughly.
4. Put back on Chandelier.

WARRANTY:

This fixture has been inspected, tested, and found to be free of any electrical and structural defects. Should a problem arise due to a defective part, LATTREL CANADA INC. , will repair or replace, (at our discretion), the item free of charge. Shipping remains the responsibility of the owner.

Some conditions apply, please inquire at our website for complete details.

Lattrel Canada Inc.

80 Rue De Port-Royal Est.
Montreal, Quebec,
H3L 1H7

www.lattrel.com

Questions or comments: info@lattrel.com

Series 3600

CH-3604-D- _____



“Tomorrow’s Antiques Today”®

Congratulations on the your new CRYSTALITE purchase. Great pride and workmanship went into the manufacturing of this product . To help you enjoy it in the many years to come, please follow these recommendations for care.



Keep these instructions for future use.



LL 106243

CRYSTAL

<

Place these crystal drops as follows:

1. 6 x 5 brass bobaches = 30 pieces
2. Place through holes on chandelier



42 PCS.

>

Place through hole bottom center of chandeliers.




1 PC.

HARDWARE

“CAUTION - RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR”

**CAUTION RISK OF FIRE:
MAX 60 WATTS, TYPE G-9 OR TYPE C
FOR MORE INFO ON G-9 SEE BELOW**

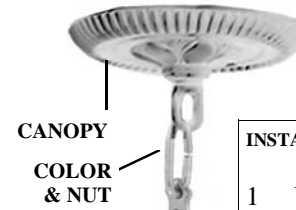

CANOPY
COLOR
& NUT

CAST BRASS
CHAIN
x 2

CHAIN LINKS
x 3



2 PCS.

INSTALLATION INSTRUCTIONS

1. Unpack fixture, and all parts, make sure all tools and parts necessary to install it are available.
2. Figure out at what height you want the fixture to be at.
3. Fit chain assembly to desired length. (distance from top of chandelier to ceiling including canopy)
4. Loosen the nut on the color and drop the canopy on the chain. (See Fig. 3)
5. Connect chain using the color with nipple to crossbar to electrical box. (make sure box is able to support the weight.)
6. Attach chandelier to the bottom of chain.
7. Take last look, making sure, it is at the desired height.
8. Put wire through chain and color into the electrical box.
9. Connect ground wire and the neutral and live wires (must be done by qualified electrician)
10. Push canopy back into ceiling and screw nut holding the canopy in place.
11. Add crystal and light bulbs.
12. Congratulations on your new chandelier



Fig.3